

# FS2

 
## **Humidity sensor**

 
#### **Features**

 The FS2 humidity sensor is designed to control humidity in ventilation, air conditioning and heating systems.



### Overall dimensions [mm]






#### Compatibility


**o** The HV2 humidity sensor is compatible with air handling units with an S14 or S21 automation system.

#### Mounting


o Possible mounting options are shown below::

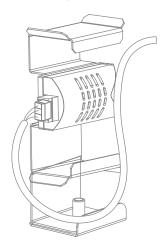

On the bracket in the exhaust air duct of the unit

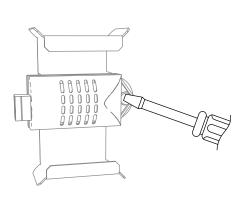

In the exhaust air duct of the unit on a threaded rivet or plastic support

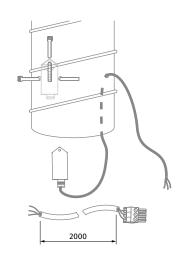

In the exhaust air duct upstream of the heat exchanger (only for KOMFORT EC S(B) 160(-E))

Find more details on the installation of the FS2 humidity sensor in the installation instructions.